C2611M (8/06)
Endura™ DVR5100 Series DVR
Control Pad Quick Reference Card

Function Keys

For all function keys: When menu is displayed, key selects menu item/icon that is of the same color

Quick export (blue):	Menus are not displayed; performs quick export
Go to live (yellow):	Menus are not displayed; selects Go to Live
Play/Pause (green):	Menus are not displayed; plays or pauses video
Change Layout (red):	Menus are not displayed; cycles through 1x1, 2x2, 3x3, and 4x4 screen layouts

+/– Keys

Live video mode:	Moves to next/previous camera in view
PTZ mode:	Press and hold to zoom in and out

Joystick

Live video mode:	Navigates to a video pane
PTZ mode:	Controls pan and tilt
Menu or dialog box:	Moves to menu item or field

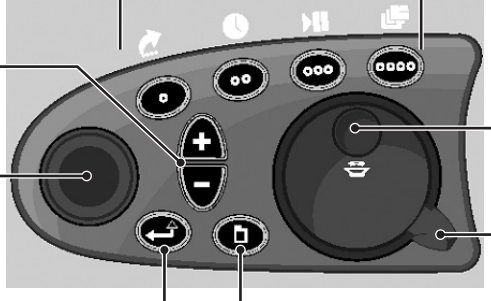

Jog (inner dial)

Clockwise:	Advances frame-by-frame
Counterclockwise:	Rewinds frame-by-frame
Hold Enter/Shift key:	Turn jog to adjust volume
In menu dialog box:	Selects numeric value or list item

Shuttle (outer ring)

Clockwise:	Increases fast forward speed
Counterclockwise:	Increases rewind speed

Enter/Shift

Menu displayed:	Press to select chosen menu item
Menu not displayed:	Press to enter or exit PTZ mode (blue border)

Menu

Live view:	Press to display menu
Menu displayed:	Press to hide menu

Pelco and the Pelco logo are registered trademarks of Pelco.
Endura is a trademark of Pelco.
©Copyright 2006, Pelco. All rights reserved.

Pelco Worldwide Headquarters 3500 Pelco Way Clovis, California 93612 USA
USA & Canada Tel: 800/289-9100 Fax: 800/289-9150 • **International** Tel: 1-559/292-1981 Fax: 1-559/348-1120 • **www.pelco.com**

Menu Mode

Press to select Export Video Clip menu.



Press to select Quick Export menu.

Live View Mode

DVR5100 starts up in live view mode.

Live View Mode

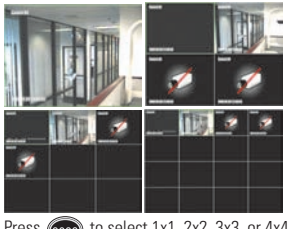

Press to select 1x1, 2x2, 3x3, or 4x4 view.

Play/Pause

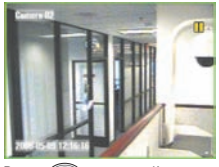

Press to pause live

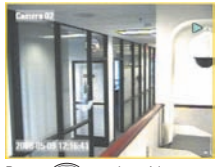

Press to play video.

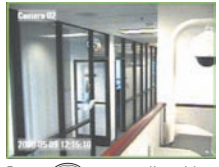

Press to go to live video.

Configuration: In a dialog box field, jog selects the numeric value or list item.

Selection: In live view, press to enter PTZ mode (blue border). Press and hold / to zoom in/out. In live view (green border), press / to select next/previous camera in pane.

Navigating Menu System



Press to display main menu. Press again to hide menu.

Quick Search

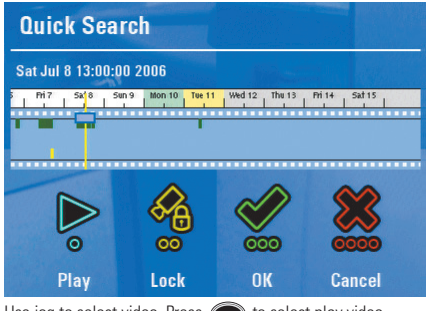

Use jog to select video. Press to select play video.

Fast Forward/Rewind

Turn shuttle clockwise to increase fast forward playback speed 2x, 4x, 15x, 60x, or 300x normal speed.

Turn shuttle counterclockwise to increase rewind speed 2x, 4x, 15x, 60x, or 300x normal speed.

DVR5100 Control Pad

Audio

Press and turn jog to adjust volume.